






A010

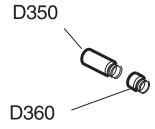

D170

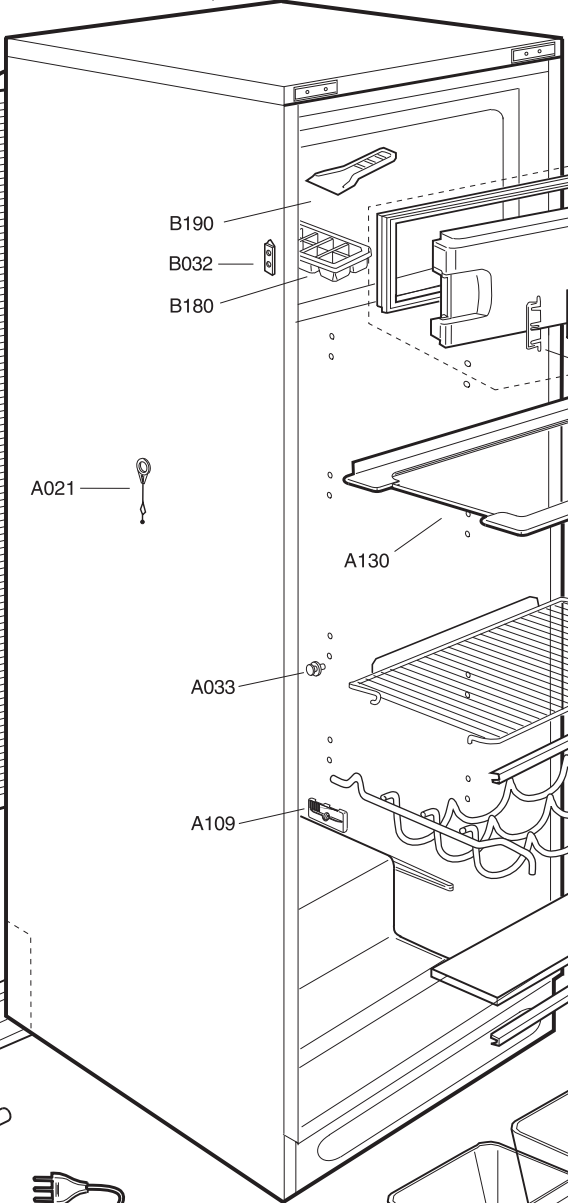

A035



D470

D130

A030


A370

A020


A105

A106

D120

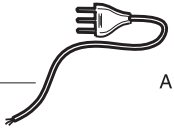

A180



A050-A590

A100

A280

B190

B032

B180

B370

B160

B470

B630

B300

B170

B150

A130

B120

B550

A130

B210

A033

A109

A044

A140

B090



A051

A310

A400

A650-A640

B100

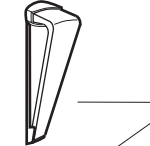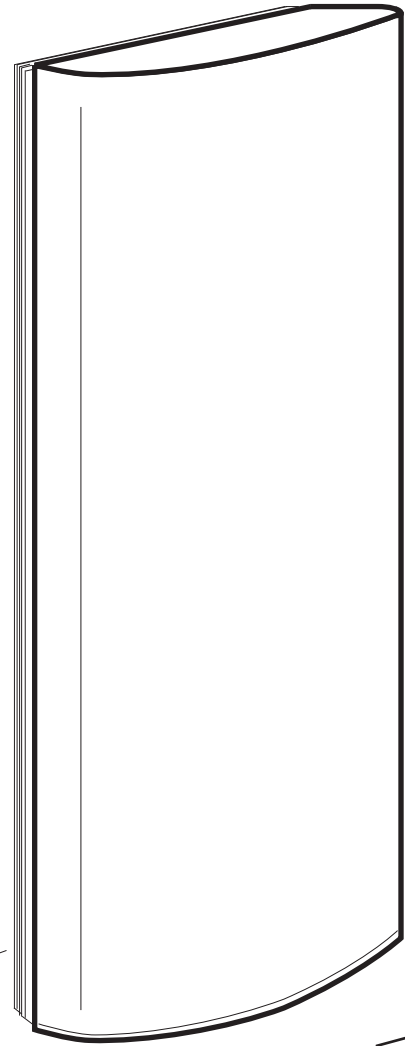

C050



C050

C380


C030



A107




A108

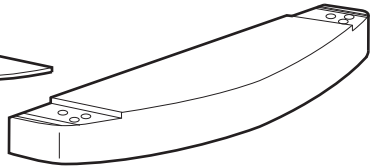


A170


**B060**

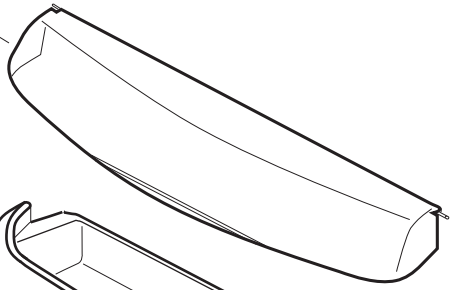


**B050**

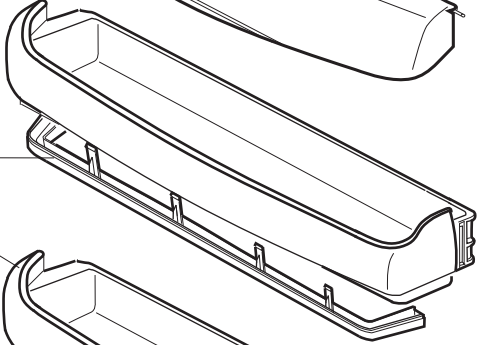


**B006**

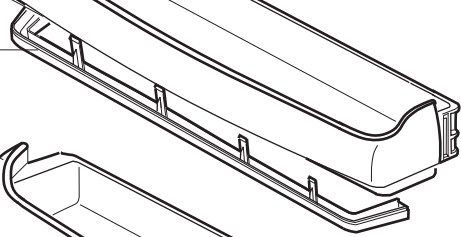


**B030**

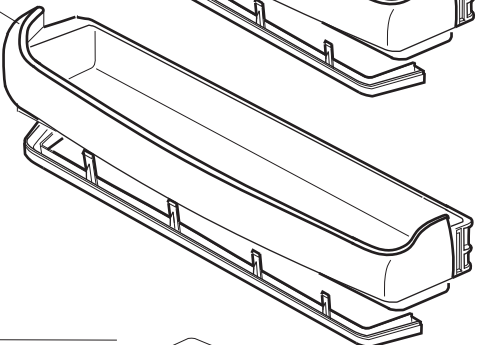


**B006**

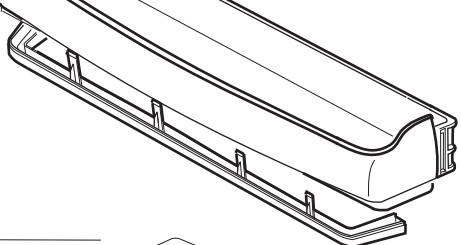


**B070**




**B510**

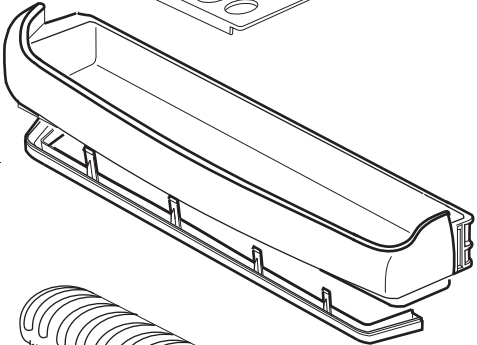


**B007**

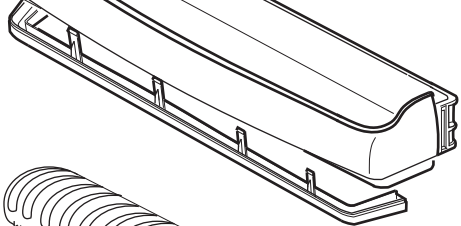


**B350**

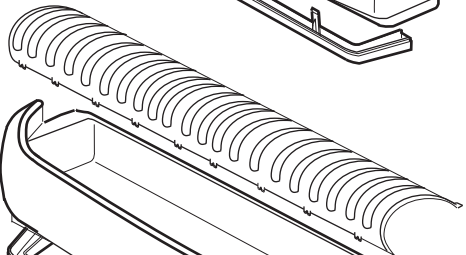


**B040**

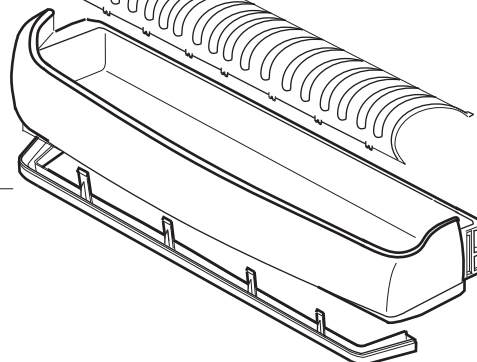


**B007**

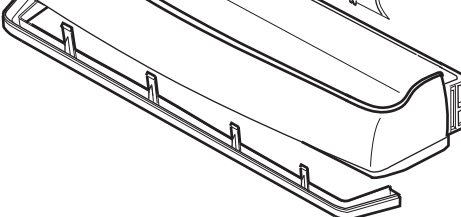

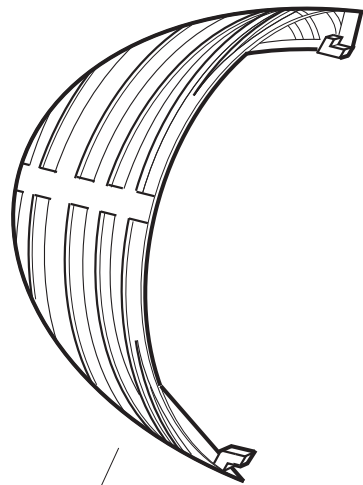


D010

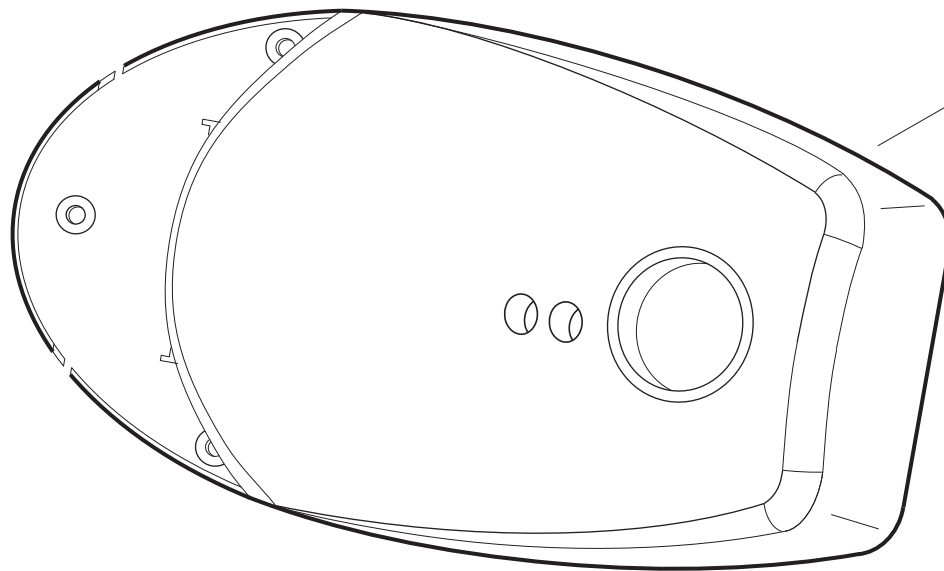



D110

D036



D090

D020

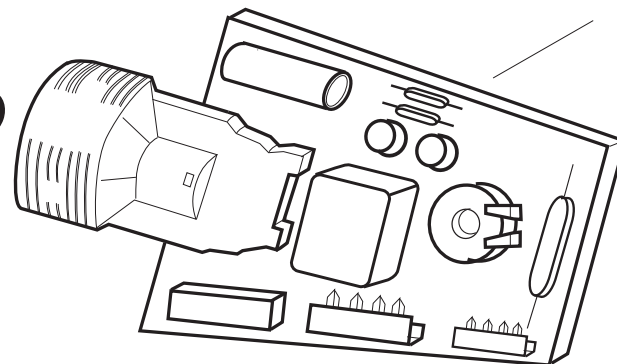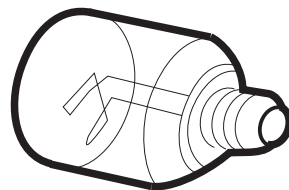

D570