

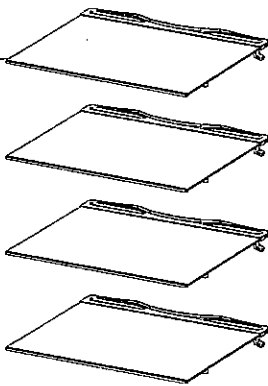
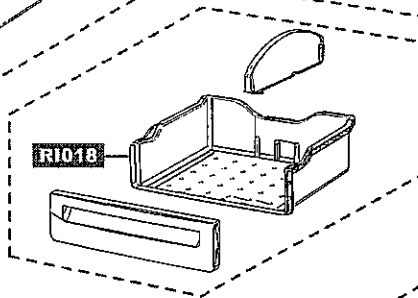
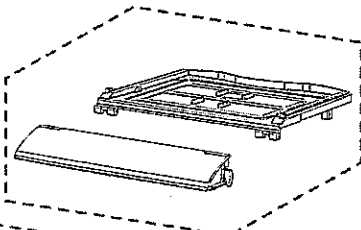
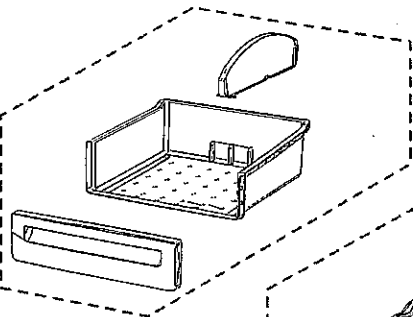


R1037

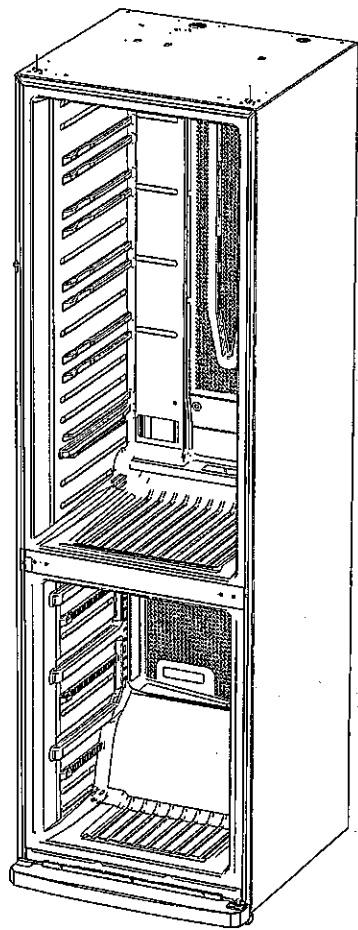

R1002

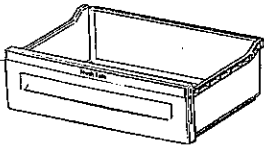

R1018

R1018





R1019







R151




R1081

R1078

RF040

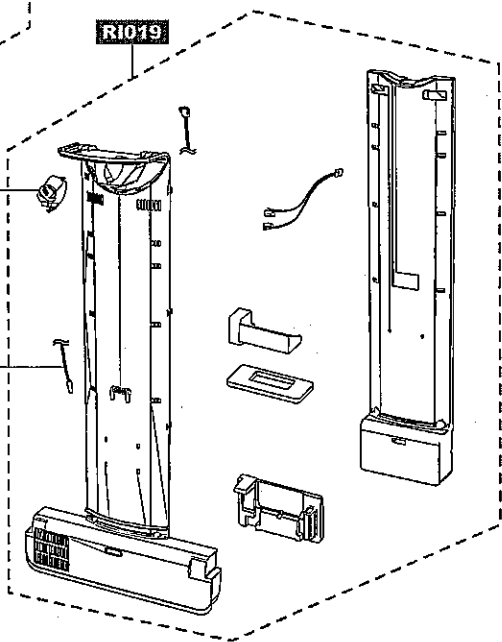

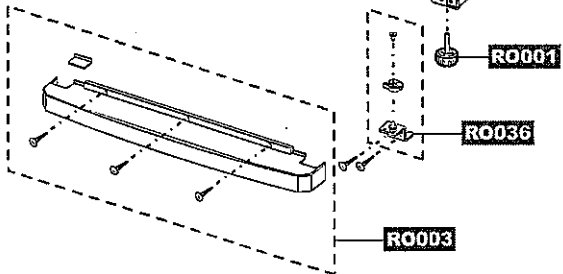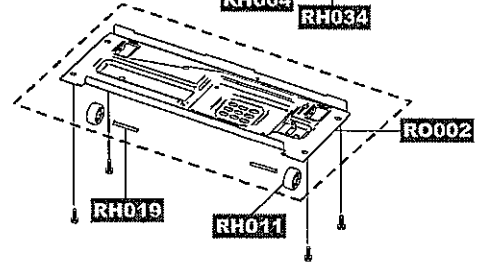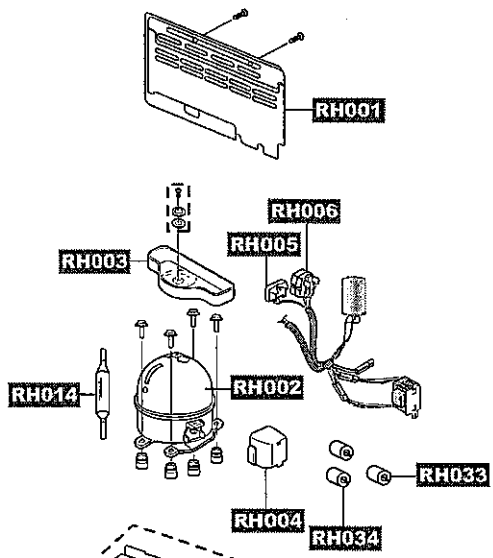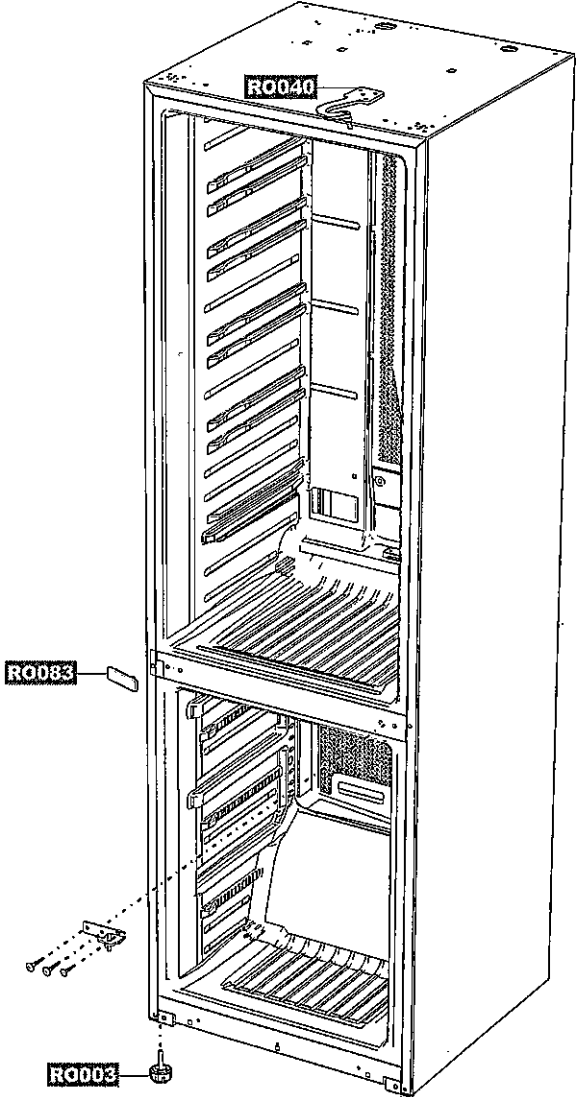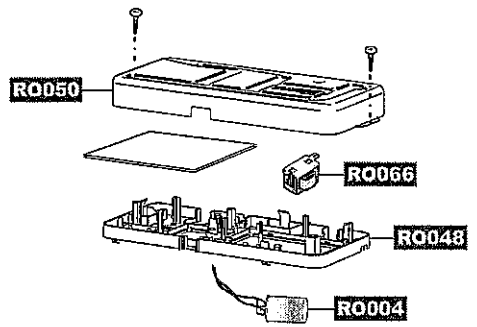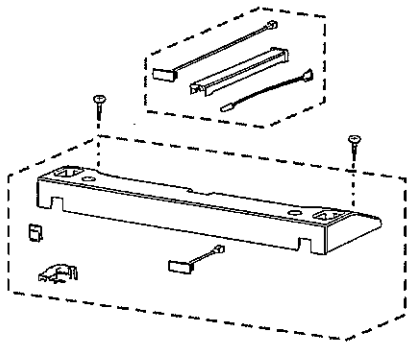

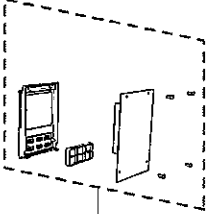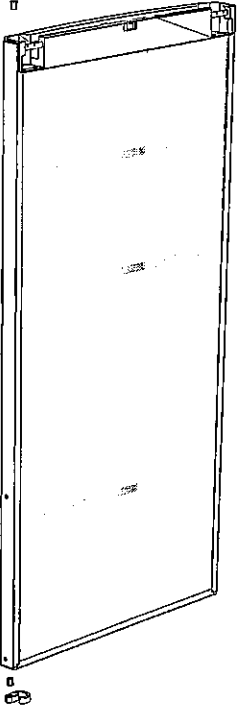

RD025


RE001



RE016

RO017

RO102

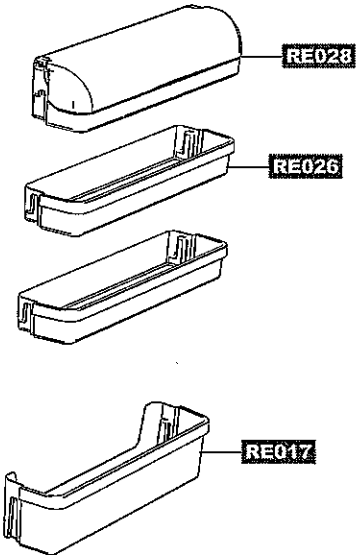


RE028

RE026


RE017

RO084

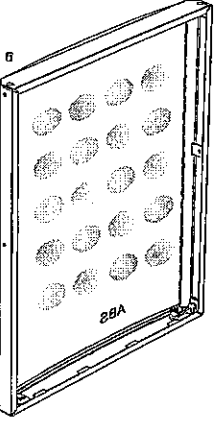


RD001

28A



RD012

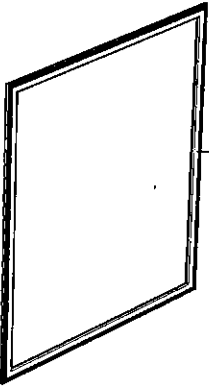

RE043

